


## DELUXE FOCUSING RAIL

**DELUXE FOCUSING RAIL** is a geared rail device allowing fine control in shifting the camera towards the subject. This movement is essential in copying and macro photography. It is invaluable also in stereo photography as a shift bar and in panoramic photography by positioning the camera so that the center of rotation is under the camera lens.

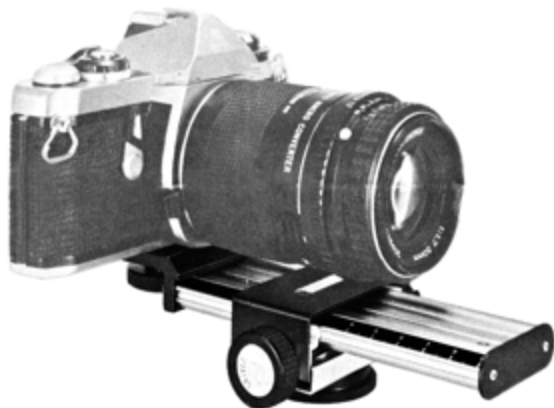

Attach the camera to the Focusing Rail by rotating the large knurled wheel tripod screw into the tripod socket. Mount the Focusing Rail to the tripod or copy stand through the tripod socket in the base of the Focusing Rail.

To rack the camera back and forth turn the **DRIVE** wheel. The track position may be locked by turning the **LOCK** wheel in a clockwise direction while holding the **DRIVE** wheel. The **LOCK** wheel may also be used as a **DRIVE** wheel by turning it in a counter clockwise direction until it engages the driveshaft.